



WR12
User Manual

Capetti
ELETTRONICA

Wincap IP



General warnings.

- The following information must be read and understood before proceeding with the installation, commissioning and maintenance of the devices described in this document.
- **ATTENTION!** Any omission or failure to follow these instructions scrupulously can cause danger.
- **ATTENTION!** Explosion hazard. In case of batteries substitution, make sure that the type is compatible and complies with the specifications indicated by the manufacturer.
- In case of batteries substitution, **DO NOT** disconnect the flat cable which connect the electronic boards without removing batteries before
- ALWAYS substitute all the batteries, also in case of one single battery exhausted.
- If the device is powered by a fixed network, make sure you have disconnected the power supply before carrying out any type of intervention. Failure to comply with this indication can cause damage to people and/or property.
- Follow the manufacturer's suggested warm-up time (*time required to obtain a reliable measurement*) of the transducer.
- Follow the manufacturer's suggested electric wiring of the transducer to measure (*ground shields at a single point, cable length and section*); voltage measures on distances exceed 15/20 meters are subjected to electromagnetic disturbances. 0÷25mA inputs have a superior electromagnetic compatibility (*EMC*).
- Avoid passage in cavities with power or high voltage cables.
- The protection and safety measures and the warranty provided by the Manufacturer with the equipment may be compromised if it's used in a manner that does not comply with this user manual.
- This equipment complies with CE regulations.
- Modifications or tampering not expressly approved by the Manufacturer could void the user's authorization to operate the equipment.
- This equipment must be installed by qualified personnel and in accordance with national regulations and/or related local requirements.
- Make sure that the object is properly fixed to supports/infrastructures capable of withstanding this load. Make sure proper methods and materials are used when fixing the equipment to a wall.
- Only personnel expressly authorized by the manufacturer can open the container. There are no user serviceable parts inside.

1. Description.


The WR12 device is a radio signal repeater used to improve link distance between probes/dataloggers and the data gathering central unit (gateway).

2. Enrol the repeater.

Not necessary if performed in factory before delivery.

Enroll the device to the network referring to the "*WineCap System - User Manual R31*". In case the device is already enrolled but in *STANDBY* status, a *TEST* command must be issued.

Open the item "*Sensor enrolling*" in "*Gateway*" menu

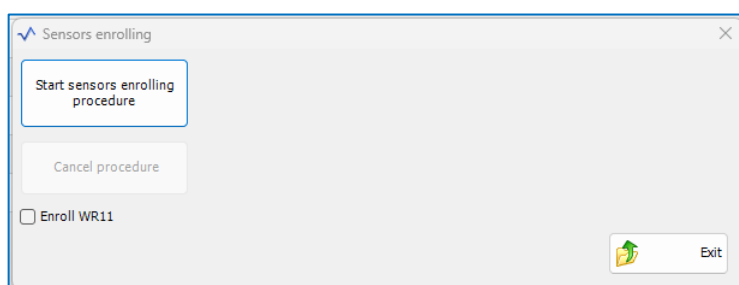

Picture 1 - Datalogger/Probe/Repeater enrolling window



Picture 2 - Product image

Before starting the enrolling procedure, a proper option must be selected:

- A. ***Start sensors enrolling procedure***: this option allows to use WR12's full features, with saving and recording of status values as radio signal quality, battery, and diagnostic information.

Repeater can be renamed with a label and historical data will be available as a common datalogger.

ATTENTION: in this mode, the WR12 repeater works as a datalogger, so uses a data recording position in the gateway's memory.



B. Enrol WR11: this option allows to use the WR12 repeater as the previous WR11, so without using any data recording position in the gateway's memory.

In this case, battery status and radio signal quality will NOT be monitored and will NOT be traced in the gateway's memory or in the Service Centre in case of remote connection.

WR12 repeater however will send status data every hour, but they will be available only in *WineCapManager* and for few seconds, where the device will be showed as a grey icon, because NOT configured in the system.

3. Reported measures.

Measures performed by WR12 repeater are diagnostic values:

000086F1 7 -30 dBm (RX)	1) Nodes 2) Packets	0 - (19/06/2023 13:20:48) 6 - (19/06/2023 13:20:48)
-------------------------------	------------------------	--

Picture 3 - Diagnostic values displayed.

Nodes: amount of dataloggers or repeaters linked with WR12. This value shows how many objects in the network sends data using a path including the WR12 in subject.


Packets: number of transmissions managed by repeater during the last measure interval.

This value depends by quantity of nodes and by transmission period they use, so is most significant than the activity performed by repeater itself.

4. Wireless device user interface.

The user interface consists of a "virtual" button that can be activated using the *WineCapKey* and of a two-colours led.

To give a command, user must approach the *WineCapKey* to the device's sensible area and keep it in that position.; the following picture (*Picture 4 - WineCapKey positioning*) shows device's sensible points.

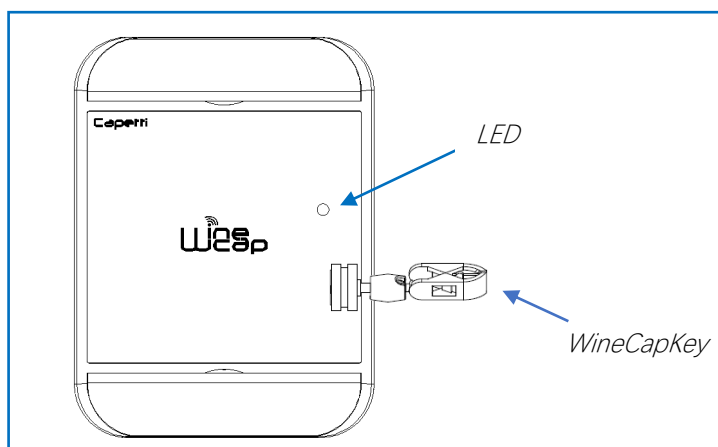

Picture 4 - WineCapKey positioning



The following COMMAND table describes the available commands:

WIRELESS DEVICES USER INTERFACE

Flash count	Command	Description
1 flash 	STATUS	Shows the device STATUS . As answer the led perform a flash sequence as reported in the STATUS table. If the device is performing the TEST (<i>refer to TEST command</i>) this command stops it.
2 flashes 	TEST	Enter in TEST mode and transmits status and measurements every 5 seconds. If the device is in STANDBY mode or it is out of radio range, this command forces the connection procedure to the WSN and the return to the operative mode. The TEST stops after 120 seconds. During TEST , the led continuously shows the STATUS to monitor the received radio signal quality.
3 flashes 	ENROL	Association to the network: must be used when the device has not yet been included in a network, starts the entry and association procedure to the gateway (<i>refer to "WineCap System - User Manual R31"</i>).
4 flashes + 4 flashes 	STANDBY	Temporary device deactivation: the device is stopped. The sampling process and the radio are/is. turned off losing the connection to the network. To reactivate, a TEST command is necessary. The STANDBY command must be given twice to confirm it: at the first sequence the led flashes alternating RED and GREEN lights, waiting for the second confirm sequence within 15 seconds. At the command execution the led flashes as the STANDBY status (<i>refer to "Picture 6 - Status table - Wireless mode"</i>).
5 flashes + 5 flashes 	FACTORY RESET	The device performs the memory deleting procedure and goes in STOP status. All samples, configuration and wireless network data associated are LOST. To reactivate the device a new association and configuration procedure is necessary (<i>ENROL command</i>). Also in this case, the FACTORY RESET command must be given twice to confirm it. At the command execution the led flashes as the "PROBE/DATALOGGER NOT ASSOCIATED" status (<i>refer to "Picture 6 - Status table - Wireless mode"</i>).

Picture 5 – Wireless devices user interface

5. Device enrolment.

Not necessary if performed in factory before delivery.

Enrol the device to the wireless network referring to the "*WineCap System - User Manual R31*". In case the device is already enrolled but in **STANDBY** status, a **TEST** command must be issued (*refer to Picture 5 – Wireless devices user interface*).

6. Installation procedure.

After installing the gateway in appropriate place in charge, (*refer to "WineCap System - User Manual R31"*), be sure that the device is enrolled to the gateway and activated.

Head for the installation point. On the way, to check the quality of the radio coverage, use the "Field Measurer" function.

This function is activated issuing the **TEST** (*refer to Picture 5 – Wireless devices user interface*) command: position the *WineCapKey* in the spot indicated in *Picture 4 - WineCapKey positioning* and wait for two AMBER flashes, then remove the *WineCapKey* from device. The "Field Measurer" function lasts enabled for two minutes.

To issue commands to the device, place the *WineCapKey* where indicated.

Once the *WineCapKey*, is detected, the led periodically emits AMBER flashes with a 2 second cadence.

For each flash, a different command is associated; to confirm the command the *WineCapKey* must be removed from the sensible area immediately after the number of flashes corresponding at the desired command. The **TEST** corresponds to the second pulse and activate the "Field Measurer" function.



The device will give back the radio signal quality through led flashes:

WIRELESS MODE STATUS Table

FLASH COUNT – WIRELESS MODE	FLASH COUNT – WIRELESS MODE	STATUS/RADIO SIGNAL QUALITY
	5 green flashes	ACTIVE - Radio signal: Excellent
	4 green flashes	ACTIVE - Radio signal: Good
	3 green flashes	ACTIVE - Radio signal: Fair
	2 amber flashes	ACTIVE - Radio signal: Sufficient
	1 red flash	ACTIVE - Radio signal: Insufficient
	1 red flash 2" long	OUT OF RANGE Network searching
	2 red flashes 2" long	STANDBY Radio off - No Logging
	Short-long-short red flashes series	FACTORY RESET Device not enrolled – No logging

Picture 6 - Status table – Wireless mode

Optimize reception selecting the best position: small movements can help.

If the signal is absent or insufficient at the install point, a repeater [WR12](#) should be put between (refer to "[WineCap System - User Manual R31](#)"). The repeater [WR12](#) itself must be in a position where the signal level is at least sufficient.

The network will reconfigure itself automatically; the signal will be good again when the device synchronizes with the repeater [WR12](#).

The wireless communication will not be reconfigured until completely lost by the device. Because of this, in some cases it could be necessary to force the operation. In such cases, put the device in **STANDBY** mode, then run the **TEST** again (refer to "[WineCap System - User Manual R31](#)").

NOTE: The display equipped datalogger ([WD04T](#)) is recommended, to verify the signal quality during devices installation.

7. Shutting off/Reactivating the device.

If the device is shut off and left unused for a long time, you can issue the **STANDBY** command (refer to [Picture 5 – Wireless devices user interface](#)). It corresponds to the command number 4 and must be issued twice to confirm the operation.

Position the [WineCapKey](#) in the spot indicated in ([Picture 4 - WineCapKey positioning](#)), and wait for four AMBER flashes, then remove the [WineCapKey](#) from device. Verify that the device asks for confirmation of **STANDBY** command with alternate GREEN/RED flashing, then position again the [WineCapKey](#) and wait for four flashes again. The device will confirm the **STANDBY** status lighting the RED led for 2 seconds twice. To reactivate the device the **TEST** command must be issued.


8. Technical Information.

Power supply	19Ah - 3,6V type "D" lithium internal battery
Battery life (*)	Up to 7 years (samples every 10 minutes and radio signal quality at least sufficient)
Working temperature	<ul style="list-style-type: none"> Operative: -30°C ÷ +60°C Warehousing: -40°C ÷ +70°C
Radio frequency	ISM 868MHz
Radio coverage	Up to 6Km in line of sight
Sealing	IP65
Dimensions	90x120x50mm
Weight	350g
Case material	ABS
Mounting	Fix on 4 points
Connections	40 probes/dataloggers and/or 15 repeaters in the same path

* battery life may be influenced by fieldwork conditions, sampling/measuring interval and system configuration.



9. Mechanical dimensions.

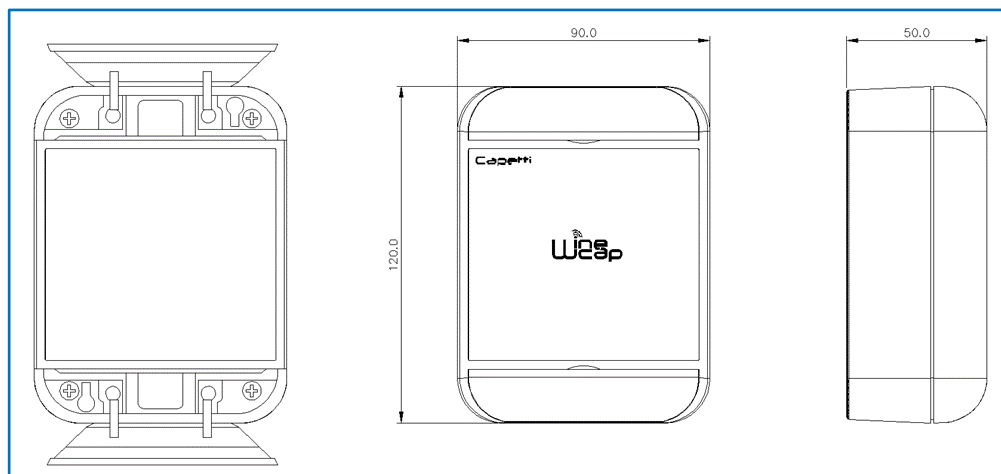

Picture 7 - Mechanical dimensions

10. Disclaimer.

- Specifications are subject to change without notice and should not be interpreted as a commitment on the part of Capetti Elettronica S.r.l.
- Capetti Elettronica S.r.l. assumes no responsibility for possibly errors that may appear in this document. In no case Capetti Elettronica S.r.l. will be liable for incidental or consequential damages resulting from the use of this document or the systems described in this document.
- All Contents published or distributed by Capetti Elettronica S.r.l. are made available for general information purposes.
- It is not permitted to publish or use, in whole or in part, such contents for commercial purposes without the explicit written consent of Capetti Elettronica S.r.l.
- The reproduction, duplication, modification, sale or resale of this material or part of it is not permitted without the explicit written consent of Capetti Elettronica S.r.l.
- The product is not intended for use in applications where safety is critical, such as life-security systems or medical-related applications.
- If a channel is saturated or disrupted "Frequency hopping" transmitting method allows data integrity and security, but correct functioning of the product in environments with high radio activity is not guaranteed.



11. Reference standards.

EN 61010 -1

For electromagnetic compatibility

EN 61000 - 3 - 2

EN 61000 - 3 - 3

EN 300 220 -2

EN 301 489 - 03

EN 61000 - 6 -1

This symbol indicates that this product is compliant with the European Directive 2011/65/CE that restricts the use of substances in the manufacturing of electronic devices.



The "WEEE" logo on the label indicates that this product is compliant with the "WEEE" EC Directive. This symbol (valid only in the European Union countries) indicates that the product it is applied to, MUST NOT be discarded with ordinary household or industrial waste, but must be sent to an authorized reception point. The end user should contact the device provider, either the manufacturer or the reseller, to agree a collection and disposal process, after having checked the terms and conditions of sale.



IT1902000001116

